


ZTE

MF971L
Let's go


Getting started with your device.

1. Prepare

- A valid micro-SIM card.

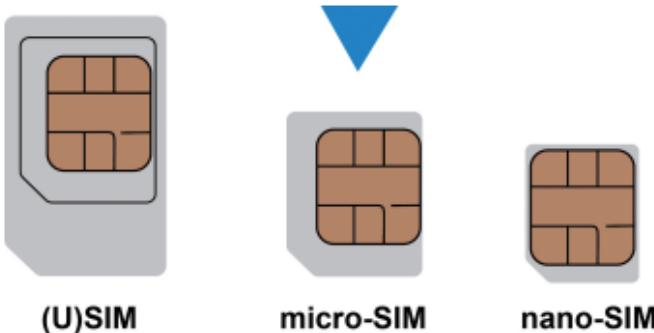

- View the label on your device to get the default information. The following figure is for your reference only.

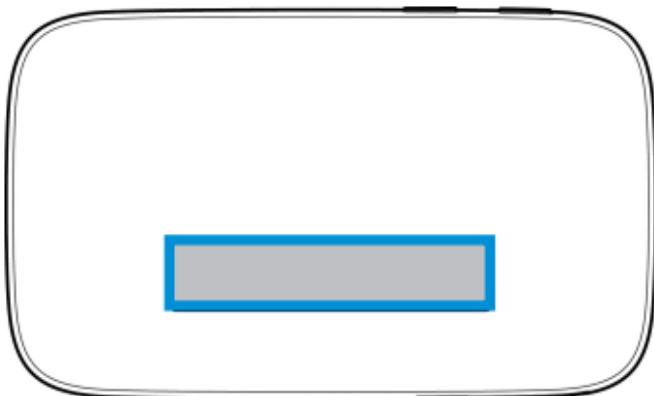

2. Insert the micro-SIM Card


1. Take out the card sticker from the packing box.
2. Align the card sticker with the micro-SIM area on the metal-free side of the micro-SIM card and then stick it.



3. Open the micro-SIM card slot cover.

 **NOTE:**


Do not remove the cover rudely, because it is connected with the device.

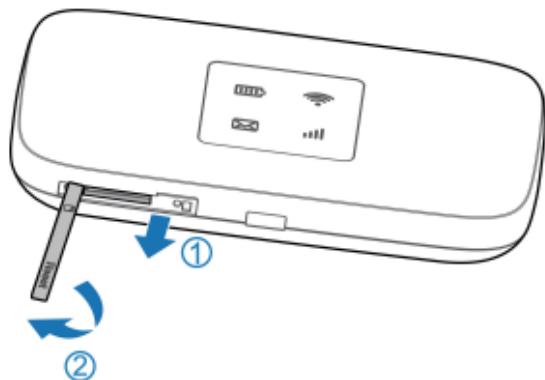

4. Insert your micro-SIM card.

 **WARNING!**

To avoid damage to the device, do not use any other kind of SIM cards, or any non-standard micro-SIM card cut from a SIM card. You can get a standard micro-SIM card from your service provider.

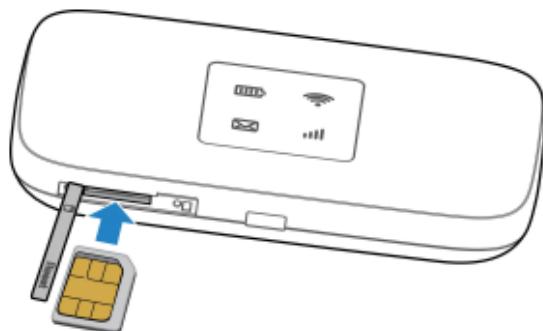

5. Close the micro-SIM card slot cover.

3. Start Your Device

Press and hold the **Power** key  for about 1.5 seconds to power on the device. After a moment the device will connect to the Internet automatically.




NOTE:


If the battery is extremely low, you may be unable to power on the device. Please charge your device first.

4. Access the Internet

- **Wi-Fi:** Get the default SSID and password on the label and connect to the Wi-Fi network with your mobile device, and then access the Internet.

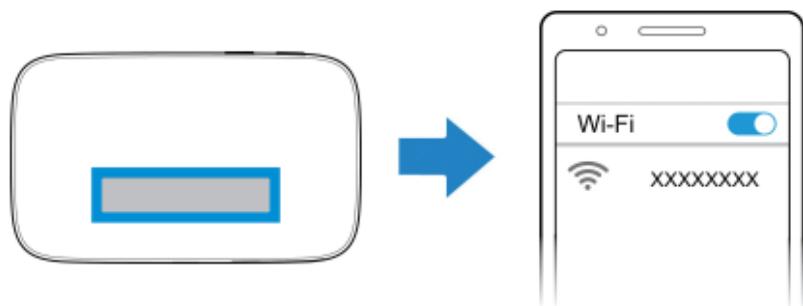

- **micro-USB cable:** Connect with the computer via USB port and then access the Internet.

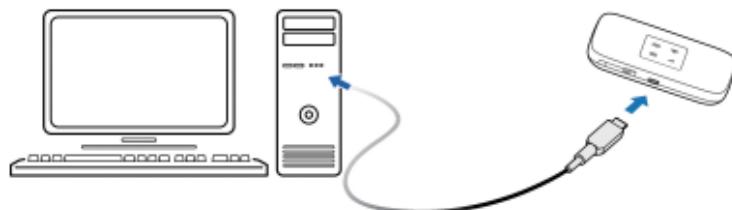

NOTE:


If the operating system does not automatically launch installation, you can double-click the device installation icon in the virtual CD-ROM to install the software.

5. Change Your Device Settings

You can change the device settings by logging in to the configuration web page.

1. View the label on your device to get the default *Device Manager Website* IP address and *Password*.
2. Launch the Internet browser. Enter the *Device Manager Website* IP address in the Address bar.
3. Input the password and then click **Login**.
4. After the configuration web page is opened, you can change the Wi-Fi SSID, password or other settings.

Indicator Icons and Interfaces

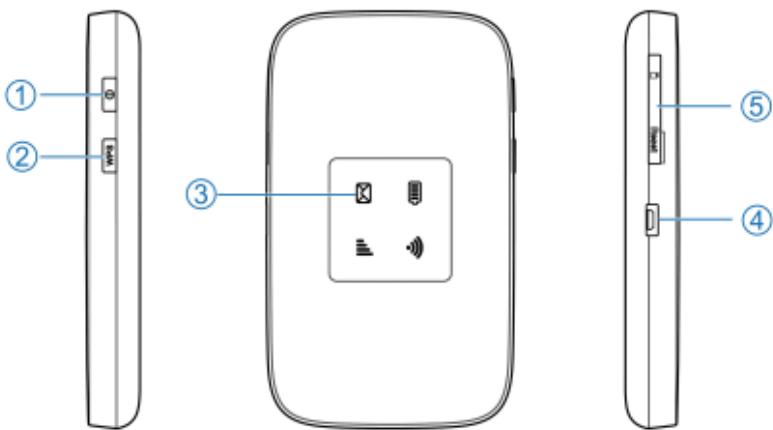

1 Power key	<ul style="list-style-type: none">• Press and hold for about 1.5 seconds to power on/off your device.• Press and hold for about 8 seconds to restart your device
2 WPS key	Press and hold for 1.5 seconds to activate the WPS function.
3 Battery	<p></p> <p>Red solid / blinking: The battery is low. Please charge the battery. Green blinking: The battery is being charged. Green solid: The battery level is middle or high. Light off: Your device is powered off and not being charged.</p>
Wi-Fi	<p></p> <p>Blue solid: Wi-Fi is active. Blue blinking: WPS is active. Light off: Wi-Fi is off.</p>
SMS	<p></p> <p>Blue solid: You have unread messages. Blue blinking: You have new messages or the message storage is full. Light off: There is neither an unread message nor a new message.</p>

Network



Red: The device is in error status.

- The device is not registered to the mobile network.
- There is no micro-SIM card inserted.
- There is no network service available.

Green solid: The device is registered to the 2G/3G mobile network.

Green blinking: The device is connected to the 2G/3G mobile network and data is being transferred.

Blue solid: The device is registered to the 4G LTE network.

Blue blinking: The device is connected to the 4G LTE network and data is being transferred.

4	Charging/micro-USB jack	Charge the device or connect to the USB port of a computer.
---	-------------------------	---

5	micro-SIM card slot cover and reset hole	<ul style="list-style-type: none">• Insert your micro-SIM card.• Reset hole: Press and hold for 1.5 seconds to restore your device to the factory settings.
---	--	--

Troubleshooting

Problem	Recommended Action
The connection between your device and a PC through a micro-USB cable cannot be established automatically.	<ul style="list-style-type: none">Install the software manually. Please run the installation program in the virtual CD-ROM.If the driver of your device is abnormal, reinstall the software. You need to uninstall the software first.
The connection between your device and a client through Wi-Fi cannot be established.	<ul style="list-style-type: none">Ensure that the Wi-Fi function is enabled.Refresh the network list and select the correct SSID.Check the IP address, and ensure that your client can automatically obtain an IP address.Enter the correct network key (Wi-Fi password) when you connect the client to your device.

Troubleshooting

Problem	Recommended Action
The client connected to the device cannot access the Internet.	<ul style="list-style-type: none">• Ensure that your micro-SIM card is available.• Change the location and find a place with good signal.• Check the settings of the WAN connection mode.• Contact your service provider and confirm your APN settings.
The configuration page cannot be visited.	<ul style="list-style-type: none">• Enter the correct address. Please view the label on your device to get the default <i>Device Manager Website</i> IP address.• Use only one network adapter in your PC.• Do not use any proxy server.

Get More Help

You can get help by:

- Sending an email to **mobile@zte.com.cn**
- Visiting **<https://www.ztedevices.com>**

LEGAL INFORMATION

Copyright © 2022 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Disclaimer

Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation. Other trademarks and trade names are those of their respective owners.

Version No.: R1.0

Warning and Notice

To the User

- If inadequately shielded, some electronic devices, for example, the electronic system of vehicles, may be affected by the electromagnetic interference caused by the device. Consult the manufacturers of such devices before using the device if necessary.
- Operating the device may interfere with medical instruments such as hearing aids and pacemakers. Always keep the device more than 20 centimeters away from such medical instruments when your device is powered on. Power off the device if necessary. Consult a physician or the manufacturers of medical instruments before using the device if necessary.
- Be aware of the usage limitation when using the device at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed. Power off the device if necessary.
- Do not use electronic transmission devices in aircraft, at petrol stations or in hospitals. Observe and obey all warning signs, and power off the device in these conditions.
- Do not touch the inner antenna area unless necessary. Otherwise the performance of the device may be affected.

- Do not use the device in an enclosed environment or where heat dissipation is poor. Prolonged work in such space may cause excessive heat and raise ambient temperature, which may lead to automatic shutdown of the device for your safety. In the case of such an event, cool the device in a well-ventilated place before turning on for normal use.
- Keep the device out of the reach of small children. The device may cause an injury if used as a toy.
- When the device is operating, do not touch the metallic parts. Failing to do so may cause burns.
- Use original accessories or accessories that are authorized. Using any unauthorized accessories may affect the performance of the device and violate the related national regulations about telecom terminals.
- Avoid using the device near or inside metallic constructions or establishments that can emit electromagnetic waves, because signal reception may be affected.
- The device is not waterproof. Keep the device dry and store it in a shady and cool place.
- Do not use the device immediately after a sudden temperature change, because dew may be generated inside and outside the device. Do not use it until it becomes dry.
- Handle the device carefully. Do not drop, bend or strike it. Otherwise the device may be damaged.

- Only qualified personnel can dismantle and repair the device.
- The humidity between 5% and 95% is recommended.
- Do not connect the charger while using the device for a long period. Failing to do so will trigger the protection mechanism of the battery, and the battery will not be charged. If you want to charge the battery, please reconnect the charger.
- Do not connect the charger while using the device for a long period or use the device and battery in non-operating temperature. Failing to do so will shorten battery life or cause battery swelling or leakage. If the battery shows signs of swelling or leakage, please stop use immediately.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Battery Safety



WARNING!

The battery is not removable. Removal may cause fire or explosion.

- Using ZTE-unapproved or incompatible battery, charger or power adapter may damage your device, shorten its lifespan or cause a fire, explosion or other hazards.
- The recommended operating temperatures are 0 °C to 35 °C and the storage temperatures are -20 °C to +45 °C. Extreme temperatures can damage the device and reduce the charging capacity and lifespan of your device and battery.
- Do not change or replace the built-in rechargeable battery in your device by yourself. The battery can only be changed or replaced by ZTE or ZTE authorized service provider.
- Do not place the device or the battery in or near heating equipment, such as microwave ovens, stoves or radiators. Keep the device and the battery away from excessive heat and direct sunlight. If not, the device or the battery may overheat and cause explosion or fire.
- Do not disassemble, squeeze or puncture the device, as this can cause explosion or fire.
- Do not throw the device into a fire to avoid explosion.
- Please disconnect the charger when the battery is fully charged. Overcharging may shorten the battery life.

- When not using the device for a long period, please charge the battery about half and then store the device in a cool dry place.
- If the battery damages or shows signs of swelling or leakage, please stop use immediately and contact ZTE or ZTE authorized service provider for replacement.

Limited Warranty

This warranty does not apply to defects or errors in the product caused by:

- i. Reasonable abrasion.
- ii. End users' failure to follow ZTE's installation, operation or maintenance instructions or procedures.
- iii. End users' mishandling, misuse, negligence, or improper installation, disassembly, storage, servicing or operation of the product.
- iv. Modifications or repairs not provided by ZTE or a ZTE-certified individual.
- v. Power failures, surges, fire, flood, accidents, and actions of third parties or other events outside ZTE's reasonable control.
- vi. Usage of third-party products or usage in conjunction with third-party products if such defects are due to the combined usage.
- vii. Any other cause beyond the range of normal usage intended for the product.

End users have no right to reject or return the product, or receive a refund for the product from ZTE under the above-mentioned situations.

This warranty is end users' sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, no matter whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

ZTE CORPORATION
NO. 55, Hi-tech Road South, Shenzhen, P.R.China
Postcode: 518057

ZTE شركة

NO. 55, Hi-tech Road South, Shenzhen, P.R.China
الرمز البريدي: 518057

تحديد المسؤولية

لا تتحمل ZTE مسؤولية خسارة الأرباح أو الأضرار غير المباشرة أو الخاصة أو العرضية أو التالية الناتجة عن استخدام المنتج أو ذات صلة بهذا الاستخدام، بصرف النظر عما إذا كان قد تم إعلام ZTE أم لا أو إذا كانت على علم أو كان يجب عليها أن تكون على علم أم لا بإمكانية حدوث مثل هذه الأضرار، بما في ذلك على سبيل المثال لا الحصر، خسارة الأرباح أو انقطاع العمل أو تكلفة رأس المال أو تكلفة المنشآت أو المنتجات البديلة أو تكلفة وقت التوقف عن العمل.

• في حالة تلف البطارية أو ظهور علامات انفاس أو تسريب بها، يُرجى التوقف عن استخدامها على الفور والاتصال بشركة ZTE أو بمزود خدمة معتمد من شركة ZTE لاستبدالها.

الضمان المحدود

لا يغطي هذا الضمان العيوب أو الأعطال في المنتج التي تسبب بها:
i. التآكل الطبيعي.

ii. عدم اتباع المستخدمين النهائيين تعليمات التثبيت من ZTE أو التعليمات أو الإجراءات التي تتعلق بالتشغيل أو الصيانة.

iii. سوء استخدام المستخدمين النهائيين للمنتج أو إهماله أو تثبيته أو تفككه أو تخزينه أو تصليحه أو تشغيله بشكل غير صحيح.

iv. إجراء تعديلات أو تصليحات من قبل شخص من خارج ZTE أو شخص غير معتمد من قبلها.

v. انقطاع الطاقة أو توفر الطاقة المفترضة أو نشوب حريق أو حدوث فيضان أو وقوع حوادث أو قيام أطراف ثالثة بإجراءات أو وقوع أحداث أخرى خارج نطاق سيطرة ZTE المعقلة.

vi. استخدام منتجات أطراف ثالثة أو استخدام المنتج مع منتجات أطراف ثالثة، إذا كانت هذه العيوب ناتجة من استخدام المنتج مع منتجات أخرى.

vii. أي سبب آخر خارج عن نطاق الاستخدام العادي المخصص للمنتج.
لا يملك المستخدمون النهائيون الحق في رفض المنتج أو إعادته أو استرداد ثمنه من ZTE في ظل الحالات المذكورة أعلاه.

يعتبر هذا الضمان هو ضمانة المستخدمين النهائيين الوحيدة والمستند الوحيد الذي يحدد مسؤولية ZTE الوحيدة التي تتحمّلها في ما يتعلق بالعناصر التالفة أو غير المتواقة وهو يقوم مقام كافة الضمانات الأخرى المعلنة صراحةً أو المضمنة أو القانونية، بما في ذلك على سبيل المثال لا الحصر، الضمانات المضمنة التي تشمل قابلية التسويق والتوافق مع هدف معين، ما لم تنص أحكام القانون الملزمة على غير ذلك.

تحذير!

- البطارية غير قابلة للإزالة. فقد تسبب إزالة البطارية في حدوث حريق أو انفجار.
- قد يؤدي استخدام بطارية أو شاحن أو مهابي طاقة غير معتمد أو غير متواافق مع مواصفات شركة ZTE إلى إلحاق الضرر بجهازك أو تقصير عمره أو التسبب في نشوب حريق أو انفجار أو مخاطر أخرى.
 - درجات حرارة التشغيل الموصى بها تتراوح من 0 إلى 35 درجة مئوية ودرجات حرارة التخزين تتراوح من -20 إلى +45 درجة مئوية. وقد يؤدي درجات الحرارة القصوى إلى تلف الجهاز وتقليل سعة الشحن وعمر البطارية. لا تُغيّر البطارية المضمنة القابلة للشحن في جهازك أو تستبدلها بنفسك. يمكن تغيير البطارية أو استبدلتها فقط بواسطة شركة ZTE أو مزود خدمة معتمد من شركة ZTE.
 - لا تضع الجهاز أو البطارية داخل معدات التدفئة أو بالقرب منها، مثل أفران الميكروويف أو الموقد أو المشعات. احرص على إبقاء الجهاز والبطارية بعيداً عن الحرارة المفرطة وأشعة الشمس المباشرة. وإنما، فقد يؤدي ذلك إلى ارتفاع درجة حرارة الجهاز أو البطارية، مما قد يتسبب في نشوب حريق أو حدوث انفجار.
 - لا تحاول فك البطارية أو الضغط عليها أو ثقبها، لأن ذلك قد يتسبب في حدوث انفجار أو نشوب حريق.
 - لا تعمد إلى إلقاء الجهاز في النار لتجنب حدوث انفجار.
 - يُرجى فصل الشاحن عندما تكون البطارية مشحونة بالكامل. فقد يؤدي الشحن الزائد إلى تقصير عمر البطارية.
 - عندما تتوقف عن استخدام الجهاز لفترة طويلة، يُرجى شحن البطارية إلى نصفها تقريباً ثم تخزين الجهاز في مكان بارد وجاف.

- تم استخدامه كلعبة.
- عندما يكون الجهاز قيد التشغيل، لا تلمس الأجزاء المعدنية. قد يؤدي لمسها إلى التسبب بحرق.
- استخدم الملحقات الأصلية أو الملحقات المعتمدة. قد يؤثر استخدام أي ملحقات غير معتمدة في أداء الجهاز وينتهك الأنظمة الوطنية ذات الصلة والتي تتعلق بالأجهزة الطرفية للاتصال.
- تجنب استخدام الجهاز بالقرب من أو داخل المناشر أو المباني المعدنية التي قد تبث موجات كهرومغناطيسية لأن استقبال الإشارة قد يتاثر.
- ليس الجهاز مضاداً للماء. أبي الجهاز جافاً وضعه في مكان بارد وفي الظل.
- لا تستخدم الجهاز فوراً بعد حدوث تغير مفاجئ في درجات الحرارة إذ قد تتكون الرطوبة بداخله وعلى هيكله. لا تستخدمه إلى أن يصبح جافاً.
- استخدم الجهاز بعناية. لا توقع الجهاز أو تثنه أو تعرضه لصدمة. وإن فقد يتضرر.
- يمكن للموظفين المؤهلين فقط تفكيك الجهاز وتصليحه.
- تتراوح درجة الرطوبة الموصى بها بين 5% و 95%.
- لا تقم بتوصيل الشاحن أثناء استخدام الجهاز لمدة طويلة. سوف يؤدي عدم الالتزام بذلك إلى تشغيل آلية حماية البطارية، ولن يتم شحن البطارية. إذا كنت تزيد شحن البطارية، فيرجى إعادة توصيل الشاحن.
- لا تقم بتوصيل الشاحن أثناء استخدام الجهاز لمدة طويل أو استخدام الجهاز مع وجود البطارية في درجة حرارة مخصصة لغير التشغيل. سوف يقلل عدم الالتزام بذلك من عمر البطارية أو سيؤدي إلى انتفاخها أو تسربها. إذا أظهرت البطارية علامات الانفاس أو التسريب، فيرجى إيقاف استخدامها على الفور.
- بالنسبة إلى الأجهزة القابلة للتوصيل، يجب تثبيت مأخذ التوصيل بالقرب من الجهاز ويجب أن يكون الوصول إليه سهلاً.

للمستخدم

- إذا تمت حماية بعض الأجهزة الإلكترونية بشكل غير صحيح، فقد يتأثر، على سبيل المثال، النظام الإلكتروني في المركبات بالداخل الكهرومغناطيسي الذي يوأله الجهاز. يُرجى استشارة الشركات المصنعة لهذه الأجهزة قبل استخدام الجهاز، إذا لزم الأمر.
- قد يتعرض تشغيل الجهاز مع الأجهزة الطبية مثل مساعدات السمع وأجهزة تنظيم ضربات القلب. عند تشغيل الجهاز، احرص دائمًا على الحفاظ على مسافة قدرها 20 سنتيمترًا بينه وبين هذه الأجهزة الطبية. أوقف تشغيل الجهاز إذا لزم الأمر. قبل استخدام الجهاز، يُرجى استشارة الطبيب أو الشركات المصنعة للأجهزة الطبية، إذا لزم الأمر.
- احرص على مراعاة قيود الاستخدام عند استخدام الجهاز في أماكن مثل المستودعات النفطية أو المصانع الكيميائية، حيث توجد غازات متفجرة أو منتجات متفجرة قيد المعالجة. أوقف تشغيل الجهاز إذا لزم الأمر.
- لا تستخدم أجهزة الإرسال الإلكترونية في الطائرات أو محطات التزود بالوقود أو المستشفيات. التزم بإشارات التحذير كلها وامتنل لها وأوقف تشغيل الجهاز في هذه الحالات.
- لا تلمس منطقة الهوائي الداخلية إذا لم تدع الحاجة إلى ذلك. وإن فقد يتأثر أداء الجهاز.
- لا تستخدم الجهاز في أماكن مغلقة أو في الأماكن حيث لا يوجد تبديد جيد للحرارة. قد يتسبب العمل لفترات طويلة في أماكن مماثلة إلى تخطي درجة الحرارة للدرجات المسموح بها وإلى ارتفاع درجة الحرارة المحيطة، مما قد يؤدي إلى إيقاف تشغيل الجهاز تلقائيًا للحفاظ على سلامتك. في حال حدوث ذلك، ضع الجهاز في مكان يتمتع بتهوية جيدة ليبرد قبل تشغيله للاستخدام العادي.
- أبق الجهاز بعيدًا عن متناول الأطفال. قد يتسبب الجهاز بإصابة جسدية إذا

حقوق الطبع والنشر © ZTE CORPORATION 2022 جميع الحقوق محفوظة.

لا يجوز اقتباس أي جزء من هذا المنشور أو استنساخه أو ترجمته أو استخدامه بأي شكل أو بأي وسيلة، إلكترونية كانت أم ميكانيكية، بما في ذلك التصوير الفوتوغرافي والميكروفيلم، دون الحصول على إذن خطى مسبق من شركة ZTE.

إشعار

تحتفظ شركة ZTE بحقها في إجراء تعديلات على أخطاء الطباعة أو تحديث المواصفات المذكورة في هذا الدليل دون إشعار مسبق.

أخلاء المسؤولية

قد تختلف الصور ولقطات الشاشة المستخدمة في هذا الدليل عن المنتج الفعلي. وقد يختلف المحتوى الوارد في هذا الدليل عن المنتج أو البرنامج الفعلي.

العلامات التجارية

ZTE وشعارات ZTE هي علامات تجارية لشركة ZTE.
أما العلامات التجارية والأسماء التجارية الأخرى فهي ملك لأصحابها المعنين.

رقم الإصدار: R1.0

المزيد من المساعدة

يمكنك الحصول على المساعدة عبر:

- إرسال بريد إلكتروني إلى **mobile@zte.com.cn**
- زيارة الموقع **https://www.ztedevices.com**

استكشاف الأخطاء وإصلاحها

المشكلة	الإجراء الموصى به
يتعذر على جهاز العميل المتصل بالجهاز الوصول إلى الإنترنت.	تأكد من أن بطاقة micro-SIM متوفرة.
يتعذر على جهاز العميل المتصل بالجهاز الوصول إلى الإنترنت.	غير الموقع واعثر على مكان تكون فيه الإشارة جيدة.
يتعذر على جهاز العميل المتصل بالجهاز الوصول إلى الإنترنت.	تحقق من إعدادات وضع اتصال WAN.
يتعذر على جهاز العميل المتصل بالجهاز الوصول إلى الإنترنت.	اتصل بموفر الخدمة لديك وأكّد إعدادات APN.
تتعذر زيارة صفحة التكوين.	أدخل العنوان الصحيح. راجع الملصق الموجود على جهازك للحصول على عنوان IP الافتراضي لموقع الويب لإدارة الأجهزة.
تتعذر زيارة صفحة التكوين.	استخدم محول شبكة واحد فقط في الكمبيوتر الشخصي.
تتعذر زيارة صفحة التكوين.	لا تستخدم أي خادم وكيل.

استكشاف الأخطاء وإصلاحها

المشكلة	الإجراء الموصى به
• يتعذر إنشاء اتصال تلقائي بين جهازك والكمبيوتر بواسطة كبل micro-USB.	ثبت البرنامج يدوياً. يُرجى تشغيل برنامج التثبيت في القرص المضغوط CD-ROM الظاهري. إذا كان برنامج تشغيل الجهاز غير طبيعي، فُيرجى إعادة تثبيت البرنامج. عليك إلغاء تثبيت البرنامج أولاً.
• يتعذر إنشاء اتصال بين جهازك وجهاز عميل عبر شبكة Wi-Fi.	تأكد من أن وظيفة Wi-Fi ممكّنة. قم بتحديث قائمة الشبكات وحدد SSID الصحيح. تحقق من عنوان IP، وتأكد من أن الجهاز العميل يمكنه الحصول تلقائياً على عنوان IP. أدخل مفتاح الشبكة الصحيح (كلمة مرور Wi-Fi) عند إنشاء اتصال بين جهاز العميل وجهازك.

الشبكة



أحمر: الجهاز في حالة الخطأ.

- الجهاز غير مسجل بشبكة المحمول.
- لم يتم إدخال بطاقة micro-SIM.
- لا تتوفر خدمة الشبكة.

أخضر ثابت: الجهاز مسجل على شبكة المحمول

.2G/3G

وميضم باللون الأخضر: الجهاز متصل بشبكة المحمول 2G/3G ويجري نقل البيانات.

أزرق ثابت: الجهاز مسجل على شبكة 4G LTE

وميضم باللون الأزرق: الجهاز متصل بشبكة 4G LTE ويجري نقل البيانات.

اشحن الجهاز أو قم بتوصيله بمنفذ USB على الكمبيوتر.

4 مقبس الشحن/مقبس
micro-USB

.micro-SIM

•

غطاء فتحة بطاقة

5

فتحة إعادة التعيين: اضغط مع الاستمرار


لمدة 1.5 ثانية لإعادة جهازك إلى إعدادات
المصنع.

فتحة micro-SIM

إعادة التعيين

<ul style="list-style-type: none"> • اضغط باستمرار لحوالي 1.5 ثانية لتشغيل/إيقاف تشغيل الجهاز. • اضغط باستمرار لحوالي 8 ثوانٍ لإعادة تشغيل الجهاز 	1 مفتاح الطاقة
<p>اضغط باستمرار لحوالي 1.5 ثوانٍ لتنشيط وظيفة WPS.</p>	2 WPS مفتاح
<p>أحمر ثابت / وميض: مستوى طاقة البطارية منخفض. يُرجى شحن البطارية.</p> <p>وميض باللون الأخضر: يتم شحن البطارية.</p> <p>أخضر ثابت: مستوى شحن البطارية متوسط أو عالٍ.</p> <p>الضوء متوقف: جهازك متوقف عن العمل ولا يجري شحنه.</p>	3 البطارية
<p>أزرق ثابت: شبكة Wi-Fi نشطة.</p> <p>وميض باللون الأزرق: وظيفة WPS نشطة.</p> <p>الضوء متوقف: شبكة Wi-Fi متوقفة.</p>	Wi-Fi
<p>أزرق ثابت: لديك رسائل غير مفروعة.</p> <p>وميض باللون الأزرق: لديك رسائل جديدة أو مساحة تخزين الرسائل ممتلئة.</p> <p>الضوء متوقف: لا توجد رسالة غير مفروعة ولا توجد رسالة جديدة.</p>	رسائل SMS

أيقونات المؤشر والواجهات

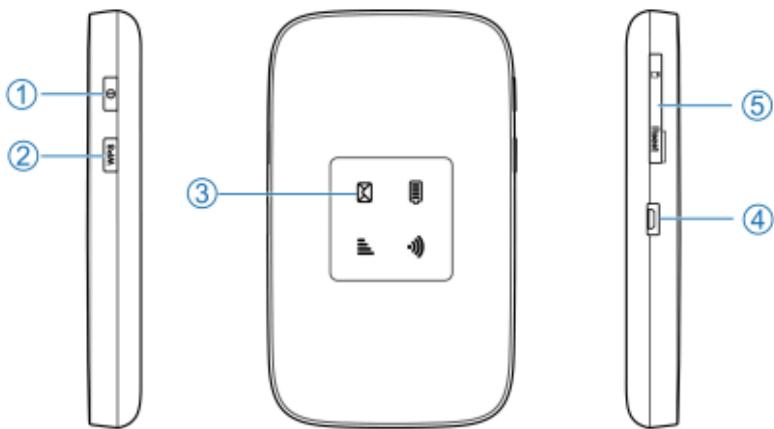


5. تغيير إعدادات جهازك

يمكنك تغيير إعدادات الجهاز عن طريق تسجيل الدخول إلى صفحة التكوين على الويب.


1. راجع الملصق الموجود على جهازك للحصول على عنوان IP الافتراضي لموقع الويب لإدارة الأجهزة وعلى كلمة المرور.
2. ابدأ تشغيل متصفح الإنترنت. أدخل عنوان IP الموضح في موقع الويب لإدارة الأجهزة في شريط العنوان.
3. أدخل كلمة المرور ثم انقر فوق تسجيل الدخول.
4. بعد فتح صفحة التكوين على الويب يمكنك تغيير عنوان SSID الخاص بشبكة Wi-Fi أو كلمة المرور أو إعدادات أخرى.

٤. الوصول إلى الانترنت

- احصل على SSID وكلمة المرور الافتراضية على الملصق واتصل بشبكة Wi-Fi بواسطة جهازك المحمول، ثم اتصل بالإنترنت.

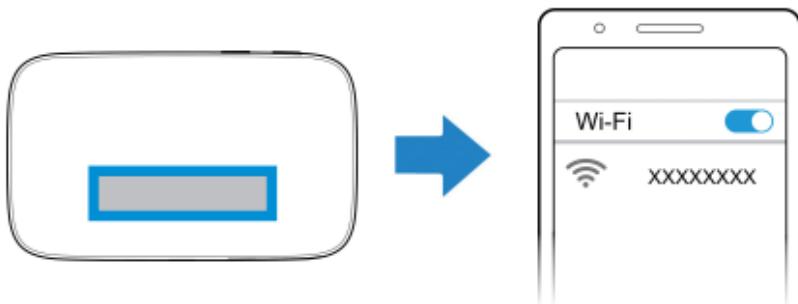

- كابل micro-USB: اتصل بالكمبيوتر عبر منفذ USB، ثم اتصل بالإنترنت.

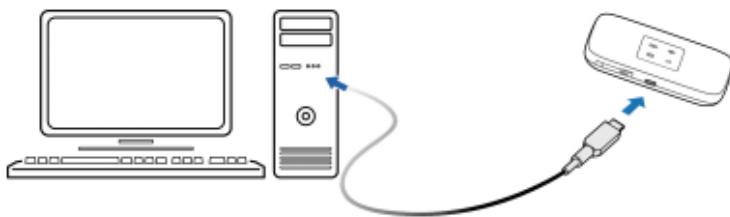

 ملاحظة:

إذا لم يبدأ النظام عملية التثبيت بشكل تلقائي، فانقر نقرًا مزدوجًا فوق أيقونة تثبيت بالجهاز في القرص المضغوط CD-ROM الظاهري لتنصيب البرنامج.

3. ابدأ تشغيل جهازك

اضغط باستمرار على مفتاح التشغيل لمدة ① 1.5 ثانية تقريرًا لتشغيل الجهاز. بعد مرور برهة قصيرة، سيتصل الجهاز بالإنترنت تلقائيًا.


 **ملاحظة:**

إذا كان مستوى طاقة البطارية منخفضًا للغاية، فقد يتعرّج عليك تشغيل الجهاز.
يرجى شحن جهازك أولاً.

4. أدخل بطاقة micro-SIM.

تحذير!

لتجنب إلحاق ضرر بالجهاز، لا تستخدم أي نوع آخر من بطاقات SIM أو أي بطاقات micro-SIM غير قياسية مقطوعة من بطاقة SIM. يمكنك الحصول على بطاقة micro-SIM قياسية من موفر الخدمة.

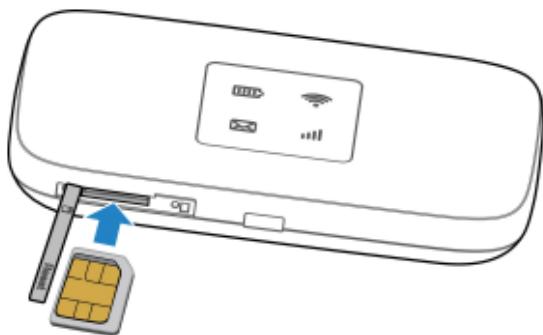

5. أغلق غطاء فتحة بطاقة micro-SIM.

2. إدخال بطاقة micro-SIM


1. أخرج ملصق البطاقة من صندوق التعبئة
2. قم بمحاذاة ملصق البطاقة مع منطقة بطاقة micro-SIM على الجانب الخالي من المعدن من بطاقة micro-SIM ثم الصقه.



3. افتح غطاء فتحة بطاقة micro-SIM.


ملاحظة:

أزل الغطاء برفق لأنه متصل بالجهاز.

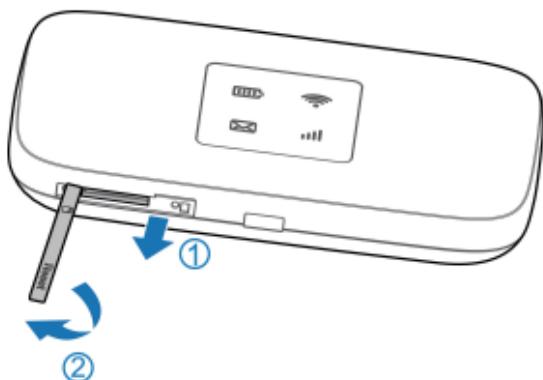


١. الاعداد

- بطاقة micro-SIM صالحة.

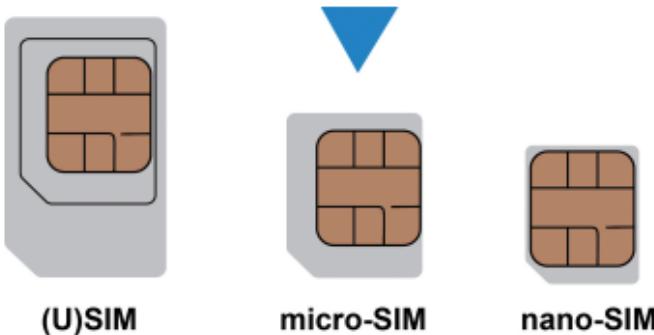

- راجع الملصق الموجود على جهازك للحصول على المعلومات الافتراضية.
الصورة التالية موجودة فقط كمرجع لك.

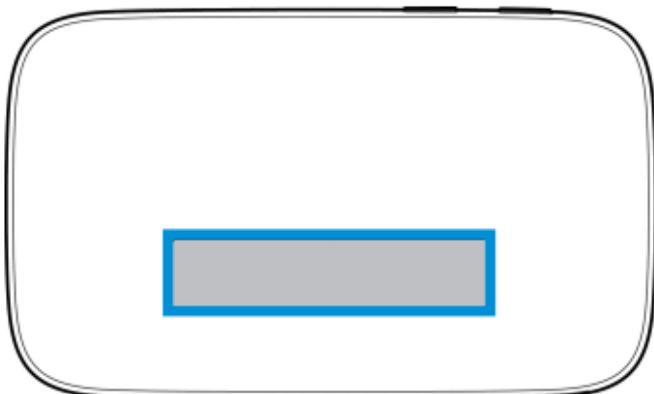

ZTE

MF971L

فلايـدـا

بدء استخدام جهازك.